

# TL25 Wirefree™ RTS Quick Programming Guide



TL25 WF RTS

## CONNECT THE MOTOR TO POWER

With the motor installed in the window covering, connect power by plugging in the li-ion battery pack or the battery tube.



1-Channel remote

5-Channel remote

## YOUR SHADE HAS BEEN PROGRAMMED BY HT WINDOW FASHIONS

Your shade(s) are programmed to the selected channel on your control.



Channel selector

Channel 1

Channel 2

Channel 3

Channel 4

Channel 5

## ADJUSTING THE UPPER OR LOWER LIMIT IN USER MODE


### UPPER LIMIT

### LOWER LIMIT


**Step 1:** Move the shade to the current limit position you wish to adjust.



**Step 2:** **PRESS & HOLD** both **UP** and **DOWN** buttons simultaneously until the shade jogs, then release.

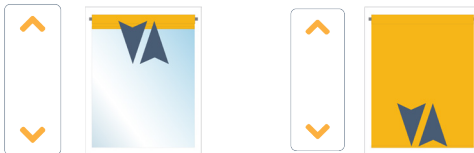

**Step 3:** Adjust to a new limit position using the UP or DOWN buttons.

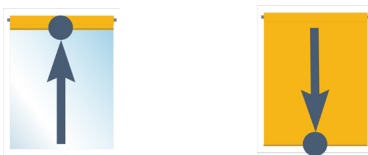

**Step 4:** **PRESS & HOLD** the **MY/STOP** button until the shade jogs, then release. Check the new limit.



## ADDING OR DELETING A CONTROL

NOTE: If working with a multi-channel remote or remotes, make sure to select the channel you wish to copy or delete.

### CONTROL 1: ORIGINAL/ TO BE KEPT

Previously programmed control - single channel or the channel (1-5) of a multi-channel remote.

a) **PRESS & HOLD** the **PROGRAMMING** **BUTTON** on the back of Control 1 **with a pin or a paper clip** until the shade jogs.



### CONTROL 2: NEW CONTROL/ OR CONTROL TO BE DELETED


Second control to be added single channel or the channel (1-5) of a multi-channel remote.

b) **BRIEFLY PRESS** the **PROGRAMMING** **BUTTON** on the back of Control 2. The shade jogs.



## SETTING INTERMEDIATE "MY" POSITION

1) Move the shade to the desired position and press **MY/STOP** button to stop the shade.

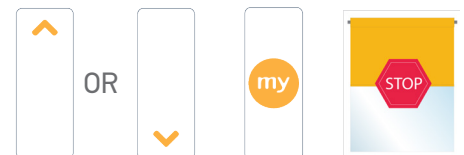


2) **PRESS & HOLD** the **MY/STOP** button until the shade jogs. The "my" favorite position is set.



3) To set a **NEW** "my" position, repeat steps 1 and 2.

## USING THE INTERMEDIATE "MY" POSITION

While the shade is stopped, a simple press of the **MY/STOP** button will move the shade to the "my" intermediate position from any shade position. If the shade is in motion you will need to press **MY/STOP** button twice, first to stop it and then to send it to the "my" position.

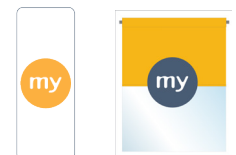


### TO DELETE PREVIOUSLY SET "MY" POSITION:

Send the shade to the current "my" position, then **PRESS & HOLD** the **MY/STOP** button for 5 seconds. The shade will jog to confirm deletion.

## In the rare instance that you need to fully / factory reset the motor, follow the steps below:

### RESETTING THE MOTOR TO FACTORY MODE

With a paperclip or a similar device **PRESS & HOLD** the **PROGRAMMING BUTTON** on the motor (shown below) for approximately 12 seconds during which the shade will jog 3 separate times. **DO NOT RELEASE UNTIL 3 JOGS.**

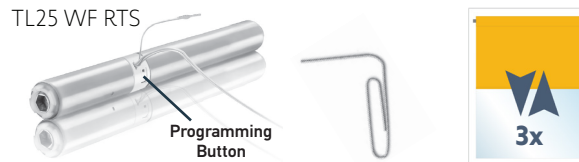

All programmed remotes and limit settings will be erased. Motor is now reset to factory mode. Motor limits will need to be re-established.



### INITIAL PROGRAMMING AND LIMIT SETTING

**NOTE:** Motor will exit programming mode after 2 minutes of inactivity. While in programming mode, the shade only operates when UP or DOWN buttons are continuously pressed.

**Step 1:** To initiate programming **PRESS & HOLD** the **UP** and **DOWN** buttons at the same time until the shade jogs.

**Step 2:** Check the direction of operation. **Press the DOWN** button and confirm the shade lowers.

If the shade raises instead of lowering, change the direction - **PRESS & HOLD** the **MY/STOP** button until the shade jogs. Confirm correct direction of operation before proceeding.



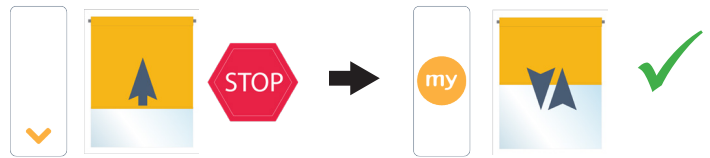
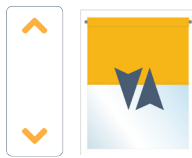


**Step 3:** Bring the shade to your desired upper limit. Make sure it is not too compressed. **PRESS & HOLD** both the **MY/STOP** & **DOWN** buttons until the shade begins to move down, then release. Stop the shade at the desired lower limit, adjust if needed.

**Step 4:** **PRESS & HOLD** the **UP** and **MY/STOP** buttons until the shade begins to move up. The shade will stop at the original upper limit.

**Step 5:** **PRESS & HOLD** the **MY/STOP** button until the shade jogs to confirm both limit settings.

**Step 6:** To finalize **BRIEFLY PRESS** the **PROGRAMMING BUTTON** on the back of the control. The shade will jog and will now operate in user mode.

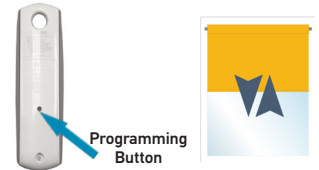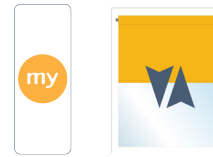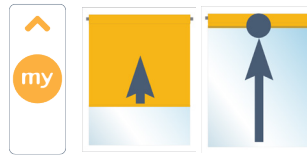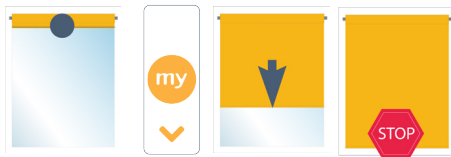

In user mode a brief press of the UP or DOWN button will send the shade to the respective limit.


### MODE SELECTION: ROLLER OR TILTING MODE

**NOTE:** Both motors are designed to work in two modes: ROLLER or TILTING mode. This feature allows the motor to be set according to the type of blind or shade you are working with.

**The Cord Lift 32 RTS is set by default to work in Roller mode** and if reset will need to be switched to work with horizontal blinds.

**The TL RTS is set by default to work in Tilting Mode** and if reset to factory mode will need to be switched to Roller mode to work with roller or cellular shades.

1) Start by moving the shade away from the end limits and then **PRESS & HOLD** the **UP** and **DOWN** buttons until the shade jogs.

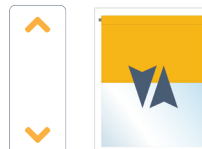

2) **PRESS & HOLD** the **MY** and **DOWN** buttons simultaneously UNTIL the shade jogs confirming the mode change.

