

4. Adjust lower limit

Hold both **DOWN** and **STOP** on controller.

5 SECS

MOTOR RESPONSE

Hold both **DOWN** and **STOP** on controller.

5 SECS

Move shade to desired lowest position by pressing the **DOWN** arrow.

To save lower limit, hold both **DOWN** and **STOP**

3. Set top limit

hold both **UP** and **STOP**.

5 SECS

MOTOR RESPONSE

hold both **UP** and **STOP**.

5 SECS

To reverse shade direction, hold both **UP** and **DOWN** until the motor responds.

2. Change motor direction

1. Pair shade to remote

Select channel on controller.

2 SECS

MOTOR RESPONSE

Hold **P1** button on motor head.

Hold **P1** button on motor head.

Release **P1** button on motor head.

15

ROOMS

Group Automate shades by room and conveniently control them accordingly.

SCENES

Personalise shade control and organise how your shades operate by specific daily events.

TIMERS

Set and forget. Lower, raise and activate shade scenes automatically at the optimal time.

MULTIPLE SHADE TYPES

Awnings, Roller shades, External shades, Cellular ... Control every shade type from one screen.



 
AUTOMATE™
A DIVISION OF ROLLESEACMEDA

+1 203-590-5318

ustechsupport@rolleseaacmeda.com



automateshades.com






AUTOMATE™
A DIVISION OF ROLLESEACMEDA

Quick Programming Guide



  5. Adjust upper limit


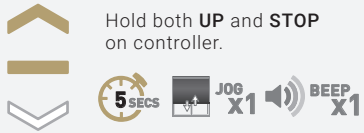


MOTOR RESPONSE



**Not required for setup*

 6. Set/Delete a Favorite Position

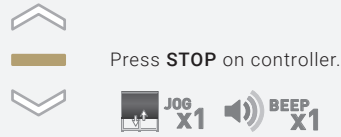

MOTOR RESPONSE



**Not required for setup*

7. Create/Delete groups using P2

 




MOTOR RESPONSE



**Not required for setup*

8. Adjust Motor Speed


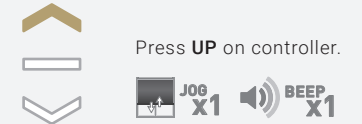
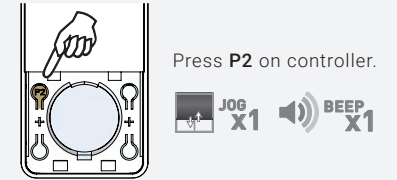


MOTOR RESPONSE



**Not required for setup*

 
9. Lock Remote

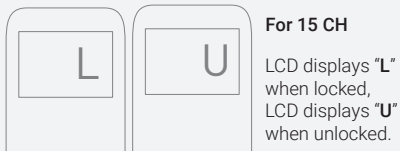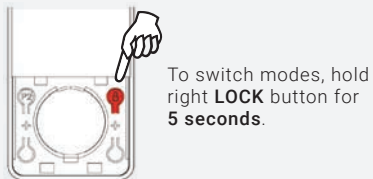

**Not required for setup*


10. Hide Channels

 Your multi channel remote can be configured to have anywhere between 1 or 15 visible channels. Inactive channels will not be visible when scrolling through the CH selection.



**Not required for setup*

11. Setting Modes

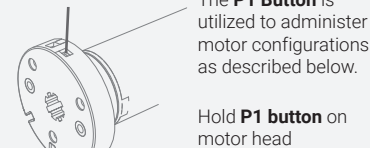

ACTIVE PAIRING MODE



SLEEP MODE



REVERSE DIRECTION




RESET TO FACTORY SETTINGS




**Not required for setup*

12. Step Mode

Default motor mode is Roller after initial Limits have been set, use following steps to change to Step Mode.

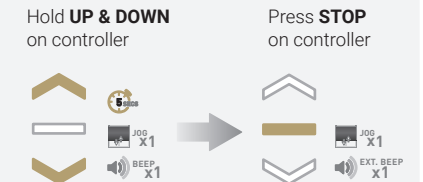

If motor is in Step Mode, use following steps to change to Roller Mode

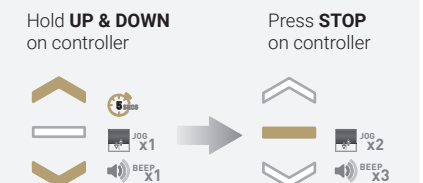

**Not required for setup*